

FRTCP/IP module Quick Installation Guide

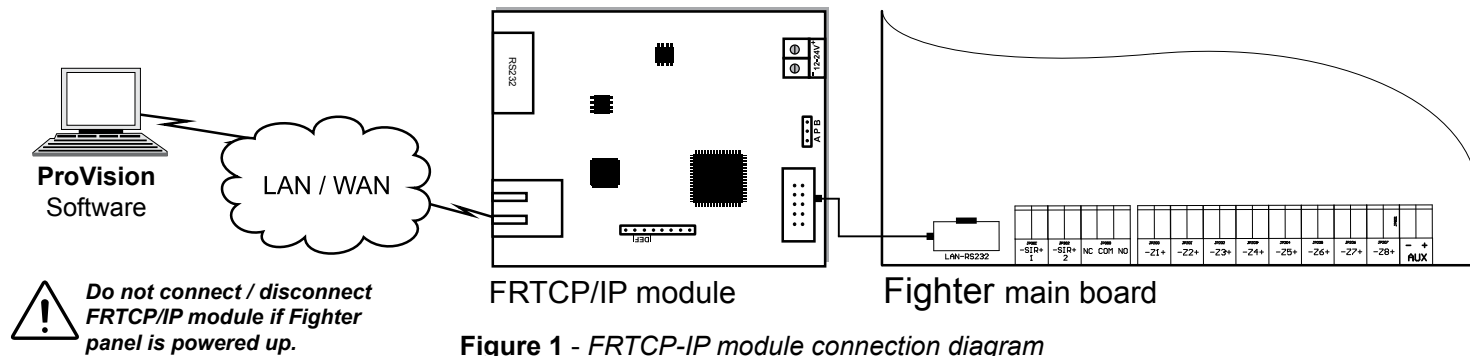


Figure 1 - FRTCP-IP module connection diagram

This guide contains the required steps to connect the FRTCP/IP Module to the Fighter fire alarm panel.

1. **WARNING:** Remove power from the Fighter panel.
2. Connect the FRTCP/IP module to the Fighter main board using the flat cable provided and as shown in Figure 1.
3. Connect the module to the Local network using the RJ-45 connector and ethernet cable as shown in Figure 1.
4. Power up Fighter panel.
5. Go to Access Level 3 menu item 7 (ALM3.7 [7.TCP/IP Options]). The FRTCP/IP module options will appear. See Installation & Operation manual section 9.3.5, page 29.

PARADOX HELLAS S.A.
fire alarm & security systems
Korintou 3, Metamorfoosi 144 51, Athens-Greece
www.paradox.gr